


RL-RRC-----MODE I with Crank Handle

MODE I

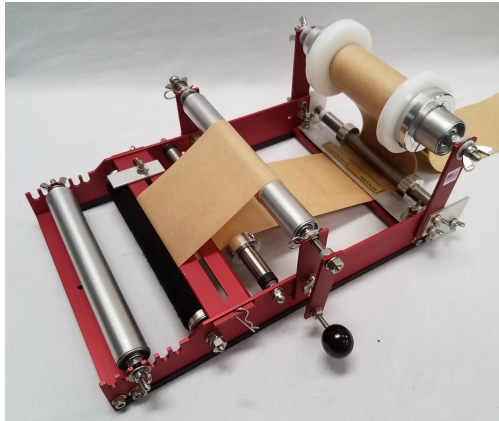

For applying a single label to straight-cylindrical bottles, containers and jars. In MODE I the RL-RRC utilizes the crank handle. Mode I is designed specifically for when labels are streaming (connected to each other) from Non-roll stock, fan folded flat stock, or even looping directly out of a printer. If the labels are not wound onto a roll, they still need to be connected to each other. *Please note the RL-RRC with the crank handle is available for an additional cost.*


<https://youtu.be/-a5L4mk344s>

<https://youtu.be/lvLWtofCM3w>

Mode II without CRANK HANDLE

RL-RRC-----

MODE II

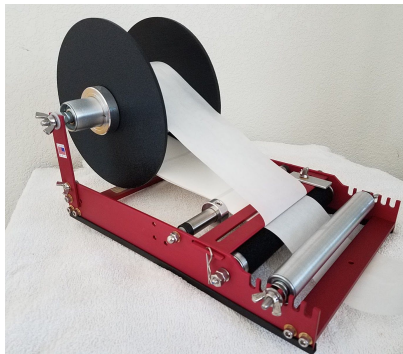

Our Patented and most commonly used method for applying labels to Straight cylindrical bottles, jars and containers is when the RL-RRC is configured in MODE II. The crank handle is not required for these types of applications..*Please note the RL-RRC with the crank handle is available for an additional cost.*

<https://youtu.be/IELNkAinYgg>

